

## A

Model	Procedure
A-50/80	While holding the first, third, and fourth buttons under the display, press CHANNEL
A-70/90/90EX	Power on while holding buttons 1, 3 and 5 (Caution: Back up any user settings before performing these steps. The unit will revert to factory settings)
AP-700	Press EXIT repeatedly to get to ANALYZER/FILTER. Cursor to MENU, press ENTER. Cursor to SYSTEM, press ENTER. Cursor to INFORMATION, press ENTER
AR-100/200	Power on while holding the DOWN (v) button
AR-1000	Power on while holding the LEFT (<), RIGHT (>) and EXIT buttons
AR-2000/3000	Power on while holding SELECT
AT-10	While holding down the PLAY and RESET buttons, press ROTARY
AT-30/80/90	Power on while holding INTRO/ENDING and START/STOP. Press COUNTRY 1
AT-30R/50R	Power on, then press and hold TRACK 4 and PLAY. Press MANUAL DRUMS
AT-50/70	Power on while holding INTRO/ENDING and START/STOP. Press SWING
AT-80R/90R	Power on, then press and hold TRACK 4 and PLAY. Press MANUAL DRUMS
AX-09	Power on while holding FAVORITE A, FAVORITE B, and WRITE, "Utl" will be displayed. Press TONE 1 "uEr" will be displayed, followed by the version.
AX-SYNTH	Power on while holding VARIATION INC/+, VARIATION DEC/-, and TONE 8.

## B

Model	Procedure
BR-8	Power on while holding UNDO/REDO and the TRACK 1 REC button
BR-532	Power on while holding V-TRACK and BOUCE ON/OFF
BR-600	Power on while holding the CURSOR Left (<) and Right (>) buttons
BR-864	Power on while holding ARRANGE/PATTERN/OFF and PROGRAM
BR-900CD	Power on while holding the CURSOR Left (<) and Right (>) buttons
BR-1180/CD	Power on while holding UNDO and the TRACK 1 REC button
BR-1200CD	With the power on, press ENTER/YES and EXIT/NO
BR-1600CD	Power on while holding UNDO and the TRACK 1 REC button

## C

Model	Procedure
CA-30	Power on while holding MUSIC STYLE and ADVANCED
CD-2	Power on while holding SPEAKER MUTE and EXIT until the version shows in the display
CD-2e/2i	Power on while holding MENU.
CDX-1	Power on while holding PAD 5, PAD FF, PAD STOP
CR-80	Power on while holding buttons 10 and 12

## D

Model	Procedure
D-2	Power on while holding VELOCITY and ENTER
D-5	Press MODE repeatedly until the ROM PLAY light comes on. While holding EXIT and EDIT, press ENTER. While holding down A/B, press the BANK 8 button
D-10/20	Power on while holding EDIT and DATA TRANSFER
D-50	Power on while holding INCREMENT and the 0 SPACE button
D-70	Power on while holding the NUMBER 1 button
D-110	Power on while holding PART DOWN (v), BANK DOWN (v) and ENTER
D-550	Power on while holding BANK 6, NUMBER 6 and EXIT
DEP-3/5	Power on while holding NUMBER and VALUE

DJ-70/70MKII	Power on
DJ-1000	Set the EFFECT switch to Off, then power on while holding Stop/Play (■/▶)
DJ-2000	Power while holding TAP
DM-80/800	Power on
DR-3	Power on while holding VARIATION PTN and VARIATION MUTE
DR-5	Power on while holding the square "m" and square "A" buttons
DR-202	Power on while holding REC and START
DR-550/MKII	Power on while holding TEMPO and the >/+1 button
DR-660/770	Power on while holding SONG and the #7 button
DR-670	Power on while holding REC and ZERO on the numeric keypad
DR-880	Power on while holding RESET, REWIND, and FORWARD
DS-330	Power on while holding LOW/SUB, UTILITY and the NUMBER DOWN (v) button

## E

Model	Procedure
E-09	Power on while holding WORLD 1, SPLIT, and KEYBOARD TOUCH.
E-20	Power on while holding the REVERB ON/OFF button
E-28US	Power on while holding TONE 2
E-30	Power on while holding the REVERB ON/OFF button
E-35	Power on while holding the BANK 8 button in the TONE section
E-38	Power on while holding TONE 2
E-56	Power on while holding UPPER in the KEYBOARD MODE section
E-66	Power on while holding PLAY in the DISK RECORDER section
E-68US	Power on while holding TONE 2
E-70	Power on while holding ENTER
E-86	Power on while holding MIXER
E-96	Power on while holding the F1 button to the right of the display
E-300	While holding ACCOMP (Part Volume), press BASS and UPPER. Power off to exit
E-500	While holding PART VOLUME ACCOMP, press TRACK2/BASS/ACCOMP and TRACK4/UPPER
Other E-Series	No system version displayed
EF-303	Power on while holding EFFECT CUE, FREQ RANGE and SYNC TYPE.
EG-101	Power on while holding DANCE/2
EM-10/20/30/50	Power on while holding TONE 1, Power off to exit
EM-20	Power on while holding TN 5
EM-303/505	Power on while holding MUSIC STYLE buttons 3, 5 and 7. Release those buttons, then press MUSIC STYLE button 1
EM-2000	Power on while holding WRITE, SHIFT and RESET/TAP TEMPO, Power off to exit
EXR-3/5/7/400R	Power on while holding FUNCTION and 1
EP-75/85	Power on while holding E PIANO 3
EP-707	Power on while holding MUSIC STYLE buttons 3, 5 and 7. Release those buttons, then press MUSIC STYLE button 1
All Other ep	No system version displayed

## F

Model	Procedure
Fantom	Power on while holding REALTIME CONTROL 1, REALTIME CONTROL 3 and RECORD
Fantom-G6/7/8	With the power on, press MENU. Press F2 [System], then press F4 [Info].
Fantom-S/S88	With the power on, press MENU. Turn the VALUE dial to select "System," then press ENTER. Press F4. Use F1[Up Arrow] and F2[Down Arrow] to select "Version Info". Press

	EXIT to return to the main menu
Fantom-Xa	With the power on, press MENU. Press CURSOR Up/Down to select "1. System." Press ENTER, then F6, then F3
Fantom-XR	With the power on, press MENU. Press ENTER. Press CURSOR Right repeatedly until the version number is displayed
Fantom-X6/7/8	With the power on, press MENU. Press ENTER. Press CURSOR Right repeatedly until the version number is displayed
FC-200	Power on while holding PEDAL 1 (Display shows last two numbers of ROM version)
FC-300	Power on while holding the Parameter < and > buttons.
FG-10/100	While holding SUB MENU and the UP (^) button, power on
FP-1	Power on while holding PIANO 1, STRINGS and CHORUS. Press FUNCTION four times (Ver. 1: REVERB LED on / Ver. 1.01: SYN STRINGS and REVERB LED's on / Ver. 3.05: E. PIANO, SYN STRINGS and REVERB LED's on.)
FP-2	Power on while holding PIANO, ORGAN, and STRINGS/PAD. 'JIG' is displayed. Press REVERB to display the version.
FP-4/7	Power on while holding the + and - buttons.
FP-5	Power on while holding Variation/Effects and Tempo Rhythm

## G

Model	Procedure
G-70	With the power on, press MENU. Touch the screen for "UTILITY," Then "INFO"
G-600/800	Power on while holding F1
G-1000	Power on while holding WRITE, SHIFT and RESET/TAP TEMPO. Power off to exit
GC-8	With the power off, connect a RRC cable from the RRC OUT to the RRC IN of a R-880. Turn the R-880 MIDI/RRC switch to RRC. Power on. (Display shows GC-8 version number)
GI-10	Power on while holding PARAMETER +. (Keep holding to see version number)
GI-20	Power on while holding SELECT and TUNER
GP-100	Power on while holding PREAMP and WRITE
GR-09	Power off, then set the MODE dial to MASTER TUNE. Set the PATCH PARAMETER dial to MAIN TONE #. Power on while holding PEDAL 4 (CPU-A #), then press PEDAL 1 (CPU-B #)
GR-1	Power on while holding DEC in the VALUE section. Then press ENTER
GR-20	Power on while holding TUNER and EXP PEDAL
GR-30	Power off, then set the EDIT TARGET dial to MIDI and set the PARAMETER SELECT dial to D. Power on while holding PEDAL 4, then press PEDAL 1 when the screen displays G.b.n or dCi. CPU A version is displayed, press pedal #1 to display CPU B
GR-33	Power on while holding COMMON, SYSTEM, and STRING SELECT
GR-50	Power on while holding VALUE DOWN (v), - PAGE and ENTER
GR-77B/700	Power on while holding the small #4 button in the STRING SELECT section
GS-6	Power on while holding NOISE SUPPRESSOR and HUM CANCEL
GS-10	Power on while holding DELAY TAP and EQ
GT-3	Power on while holding MASTER, PEDAL ASSIGN, TUNER/BYPASS, and UTILITY
GT-5	Power on while holding PEDAL ASSIGN and NAME
GT-6	Power on while holding MASTER, UTILITY, and MANUAL
GT-6B	Power on while holding MASTER, UTILITY, and EZ TONE
GT-8	Power on while holding OUTPUT SELECT, MANUAL and TUNER
GT-10/10B	Power on while holding OUTPUT SELECT and SYSTEM. Press CATEGORY/ENTER twice.
GT-Pro	Power on while holding the CHANNEL A and B buttons
GW-7	Power on while holding WORLD1, TONE and SONG
GW-8	Press MENU, use the CURSOR buttons to select 'VERSION,' then press ENTER.
GX-700	Power on while holding PREAMP and SP.SIM

## H

Model	Procedure
HP-2	Power on while holding REC and TRACK 1. Then press TRANSPOSE. "JIG" appears followed by the version number
HP-3/7	Power on while holding TRANSPOSE, REC, and TRACK 2
HP-337	With the power on, Press FUNCTION, TRACK 2 and PLAY simultaneously
HP-557	With the power on, Press METRONOME once. Then press and Hold METRONOME
HP-550G	While holding TRANSPOSE, press TRACK 2 and 4 simultaneously
HP-555	Press FUNCTION to enter function mode. Then, while holding PLAY and TRACK, press FUNCTION again
HP-1900G	Press FUNCTION. While holding METRONOME and ALL SONG PLAY, press FUNCTION
HP-2800G	Press FUNCTION. While holding METRONOME and ALL SONG PLAY, press FUNCTION
HP-2900G	While holding Track buttons RHYTHM, 2 and 3, press (and hold) FUNCTION
HP-3800G	Press FUNCTION. While holding METRONOME and ALL SONG PLAY, press FUNCTION
All Other HP	No system version displayed
HPD-15	Power on while holding EDIT and CHAIN. Continue to hold CHAIN, release EDIT and press PATCH SELECT. While continuing to hold PATCH SELECT release CHAIN and press EDIT

## J

Model	Procedure
JD-800	Press MULTI. While holding the LEFT and RIGHT cursor buttons, press EXIT
JD-990	Power on while holding DEC and INC
JP-8000/8080	Power on while holding LFO 1 WAVEFORM, 1, and 3
JS-5	Power on while holding INTRO and LATIN. Press EXIT after version is displayed
JS-8	Power on while holding the < and > buttons.
JS-30	Power on while holding DEMO
Juno-D	Power on while holding SYSTEM
Juno-Di	Power on while holding ^, v, and 9.
Juno-G	With the power on, press MENU, then use the up/down buttons to select "2. System." Press F6 [Information], then press F3 [Version].
Juno-Gi	With the power on, press MENU, then use the up/down buttons to select "4. System" and press ENTER. Press Button 6 [Information].
Juno-Stage	Press MENU. Use the CURSOR buttons to select "SYSTEM," then press ENTER. Press 7 [Information], then press 3 [Info].
JV-30	(WARNING: This procedure will automatically erase any customized settings!) Press LEVEL and PAN simultaneously. While holding VARIATION, press VIBRATO. While holding PERFORMANCE, press the BANK 16 button. (Observe version number.) Power off
JV-35/50	Press LEVEL and PAN simultaneously. While holding VARIATION, press VIBRATO. While holding PERFORMANCE, press the TONE GROUP 15 button
JV-80	Power on while holding the NUMBER 1 button
JV-90	Power on while holding PCM CARD-B and NUMBER buttons 1 and 8. Release those buttons, then press the BANK 8 button
JV-880	Power on while holding EDIT and INFO COMPARE
JV-1000	For units with serial # ZE80899 or earlier: Press PATCH (in MODE section), then press INFO. While holding the NUMBER 6 button, press CURSOR DOWN (v) For units with serial # ZF80900 or later: Power on while holding WRITE and NUMBER buttons 1 and 8. Press the BANK 8 button
JV-1010	Power off and set the Rear Select switch to MAC. Set the PART knob to 15 and the CATEGORY knob to KEY&ORGAN. Power on while holding down VOLUME (release after 5 seconds). Set the CATEGORY knob to PIANO to display the current version. Power off to exit
JV-1080	Press SHIFT and ENTER simultaneously. While holding the UP (^) and DOWN (v) cursor buttons, press the VALUE knob. Power off

JV-2080	Press SYSTEM. While holding F6, press A/TONE SWITCH 1. The ROM version is displayed on the left had side of the screen
JW-50	Press WRITE and SONG EDIT simultaneously. Hold SHIFT and press the RIGHT (>) CURSOR button
JX-10	Power on while holding the "H" button (in the PATCH section)
JX-305	While holding PATCH, PTN/SONG, and TEMPO & MEASURE, press NUMBER 4, 6 & 8 in order

## K

Model	Procedure
KF-90	With the power on, press PLAY, PART BALANCE, and FUNCTION
KR-3	While holding Accomp (Part Balance), press Bass, and Upper. Power off to exit
KR-5	Turn on the power. While pressing PLAY and TRACK 2, press FUNCTION
KR-7	Turn on the power. While pressing PLAY and TRACK 2, press WONDERLAND
KR-15/15M	With the power on, hold down PLAY and TRACK 2, then press GAME
KR-17/17M	With the power on, hold down PLAY and TRACK 2, then press GAME
KR-75	While holding ACCOMP (Part Volume), press BASS and UPPER. Power off to exit
KR-370	(WARNING: This procedure will automatically erase any customized settings!) Press FUNCTION. While holding ONE TOUCH PIANO, press INTRO/ENDING and START/STOP simultaneously. Press POP in the STYLE GROUP section
KR-375	While holding TRACK 4 and PLAY, press PART BALANCE (Accomp). Power off to exit
KR-377	Turn on the power, Press PLAY and ACCOMP, then press FUNCTION
KR-500/3000	Power on while holding MUSIC STYLE buttons A and B. (The 5 User Programs and 3 Songs will be erased)
KR-570	While holding PART VOLUME ACCOMP, press TRACK 2 and TRACK 4 (Composer section) simultaneously
KR-575	While holding TRACK 4 and PLAY, press PART BALANCE (Accomp). Power off to exit
KR-577	With the power on, press and hold PLAY and TRACK 2, then press FUNCTION
KR-650	Power on while holding ADVANCED/BASIC and SYNC STOP. Release those buttons, then press PIANO 1
KR-770	While holding PART VOLUME ACCOMP, press TRACK 2 and TRACK 4 (Composer section) simultaneously
KR-977	With the power on, press and hold PLAY and TRACK 2, then press FUNCTION
KR-1070	While holding PART VOLUME ACCOMP, press TRACK 2 and TRACK 4 (Composer section) simultaneously
KR-1077	Turn on the power. While holing down PLAY and TRACK 2, press FUNCTION
KR-3500/4500	Power on while holding ADVANCED/BASIC and SYNC STOP. Release those buttons, then press PIANO 1
KR-4700/5000	Power on while holding MUSIC STYLE buttons 3, 5 and 7. Release those buttons, then press MUSIC STYLE button 1
KR-5500	Power on while holding ADVANCED/BASIC and SYNC STOP. Release those buttons, then press PIANO 1

## L

Model	Procedure
LVC-1N	Power on while holding MENU and ENTER

## M

Model	Procedure
M-660/760	While holding EDIT, press TUNE. While holding both PART buttons, press WRITE. Press EDIT and CARD 2 simultaneously
M-BD1/DC1/OC1	Power on while holding MUTE and MONITOR. Hold PATCH and MUTE simultaneously
M-GS64	Power on while holding MUTE and MONITOR. Hold PATCH and MUTE simultaneously

M-SE1/M-VS1	Power on while holding MUTE and MONITOR. Hold PATCH and MUTE simultaneously
MC-09	Power on while holding SHIFT and the STEP 4 button
MC-80	Power on while holding CHAIN PLAY, REC, and ARPEGGIATOR. After viewing the version number, hold SHIFT and press STOP. When "The MC-80 may now be shut down safely" appears in the display, power off
MC-303	While holding SHIFT and SCALE/MEASURE, press the PART R button
MC-307	Power on while holding SONG, SYSTEM, and BPM. Power off when finished
MC-505	While holding TEMPO/MIXER, PTN/SONG, and PATCH, press keyboard pads 12, 14, and 16 in order. Repeatedly press pad 16 to access SYS version, CPU version, and DAT version
MC-808	Press SYSTEM, hold down SHIFT and press keyboard pad 14. CURSOR to Version. Press EXIT when finished
MC-909	Hold SHIFT and press F5. Release both, then press F6. Hold SHIFT, then press and release the part buttons in the order of 1 > 7 > 8 > 9. Press F5
ME-8/8B	Power on while holding PARAMETER RIGHT (>), VALUE UP (^) and BYPASS simultaneously
ME-10	Power on while holding PEDAL #2, PEDAL #3, BANK DOWN (v) and BANK UP (^) pedals
ME-30	Power on while holding USER/PRESET and PHRASE TRAINER ON/OFF
ME-33	Power on while holding GROUP SELECT and PHRASE TRAINER
ME-X	Power on while holding the PARAMETER RIGHT (>) button, VALUE UP (^) button and EDIT/ESC
Micro BR	Power on while holding < and >.
MK-80	While holding the UP (^) and DOWN (v) cursor buttons, press VARIATION button 1, then 2, then 1, then 2, then 1, then 2, then 1, then 2, then 1, then 2, then 8
MKS-30	While holding MIDI CHANNEL, use the DOWN and UP buttons to select "1" in the right window. While again holding MIDI CHANNEL, press DYNAMICS twice
MKS-70	Power on while holding VALUE
MKS-80	Power on while holding AUTO TUNE and WRITE
MS-1	Power on while holding PAD 1 and PAD 8
MT-32	Power on while holding the PART 4 button, RHYTHM and MASTER VOLUME
MT-80S	Power on while holding METRONOME. Press the VALUE + button. Immediately hold the MARKER CLEAR button and press RESET
MT-90S	With the unit on, Press SONG, 2 and PLAY simultaneously
MT-100	Power on while holding EXECUTE, QD-EXECUTE and LOAD
MT-120/120S	Power on while holding REPEAT, SONG (blue button), and PLAY
MT-200	Power on while holding REPEAT, SONG (blue button), and PLAY
MT-300/300S	While holding SONG and COUNT IN, press METRONOME. Power off and on to exit
MV-30	Power on while holding F1. The ROM version will be displayed. When "Welcome to the World of Studio M" is on the screen the system disk version will be displayed
MV-8000/8800	With the power on, Press SYSTEM then F5 INFO

## P

Model	Procedure
P-55	Power on while holding LEVEL LEFT (<) and PAN RIGHT (>)
Pad-80	Power on while holding both NUMBER buttons
PMA-5	Power off. Set COMPUTER switch to MIDI. Power on while pressing EXIT, then immediately press STOP
PR-100	Power on while holding EXECUTE, QD-EXECUTE and LOAD
Prelude	Power on while holding WORLD, TONE and V-LINK
Pro-E	Power on while holding the REVERB ON/OFF button

## R

Model	Procedure
-------	-----------

R-05/09/HR	Power on while holding the STOP button
R-5	Power on while holding CONDITION and EXIT, then press ENTER
R-8	Power on while holding FUNCTION and EXIT, then press ENTER
R-8MKII	Power on while holding TEMP ASGN and EXIT, then press ENTER
R-8M	Power on while holding CURSOR LEFT (<) and VALUE DOWN (>)
R-70	Power on while holding ASSIGN and MIXER
R-880	Power off. Connect an RRC cable from the RRC OUT of a GC-8, to the RRC IN of the R-880. Turn the MIDI/RRC switch to RRC. Power on. (Display shows GC-8 version number.) Press CANCEL. (Display shows R-880 version number)
RA-30	Power on while holding START/STOP and TO ORIGINAL
RA-50	Insert a sustain pedal into the EXT PEDAL 1 jack. Hold the pedal down. Power on while holding the REVERB ON/OFF button
RA-90	Power on while holding SYNC START
RA-95	Power on while holding PLAY
RA-800	Power on while holding the F1 button to the right of the display
RC-50	Power on while holding PARAMETER Left and Right.
RD-300GX	Power on while holding SOUND CONTROL
RD-300SX	With the unit on, hold down EDIT and WRITE and press SOUND CONTROL
RD-500	Power on while holding SYNTH, E.GRAND, MKS-20 and the NUMBER 8 button
RD-600	Power on while holding INTERNAL TONE VARIATION 1, PART SELECT TX LOWER, and PART SELECT TX UPPER
RD-700GX	Power on while holding V-LINK
RD-700/SX	With the unit on, press the EDIT button while pressing both the CURSOR RIGHT and PART SELECT(LOWER) buttons Power off when done
RS-5/9	Power on while holding PERFORM TONE, USER/PRESET and 1/PIANO
RS-50/70	Power on while holding DESTINATION TONE, ENV, and TAP TEMPO
RSP-550	Power on while holding PROGRAM/PAGE DOWN (v), VALUE DOWN (v), PARM and CONTROL
RSS-10	Power on while holding DEVICE ID and FUNCTION. Press DEMO PROGRAM
RSS-303	With unit powered on, simultaneously press LEVEL, USER PROGRAM 3 and SETUP
RV-70	Power on while holding UP (^), DOWN (v) and WRITE. Press UP (^)

## S

Model	Procedure
S-10	Power on while holding PERFORMANCE and MIDI
S-50	Connect the S-50 to a CRT, then turn CRT power on. Turn on the S-50 and insert the system disk (only ver. 1.01 to 1.09 will work). Press FUNCTION, then the "P1" button. Press SHIFT, then the #1 button on the ten-key pad. Press ENTER
S-220	Power on while holding PERFORM and MIDI
S-330	Connect the S-330 to a CRT, then turn CRT power on. Turn on the S-330 and insert the system or utility disk. Press MODE, press the DOWN (v) button three times, then EXECUTE. Press the DOWN (v) button once, then EXECUTE. Press MENU, then press DEC/NO twice
S-550	Connect the S-550 to a CRT, then turn CRT power on. Turn on the S-550 while holding the #1 button. (Hold until you see "Please Insert System Disk.") Insert the system or utility disk. When display says, "Load next disk?", press DEC/NO. Press FUNC, then MENU. Press the DOWN (v) button, then EXECUTE. Press MENU, then the #1 button. Press DEC/NO twice
S-750/760/770	Power on
SB-55	Press the POWER button to make the STANDBY light come on. While holding PROG and SET, press REW and FF
SBX-1000	Power on while holding SETUP and TIMECODE INT/EXT
SC-33	Power on while holding LOW/SUB, UTILITY and NUMBER DOWN (v)

SC-50	Press the POWER button to make the STANDBY light come on. While holding both INSTRUMENT buttons, press both MIDI CH buttons
SC-55/55MKII	Press the POWER button to make the STANDBY light come on. While holding both INSTRUMENT buttons, press both MIDI CH buttons
SC-88	Power on while holding both MIDI CH buttons, then press the PREVIEW knob immediately
SC-155	Press the POWER button to make the STANDBY light come on. While holding both INSTRUMENT buttons, press both MIDI CH buttons
SC-880	Power on while holding SYSTEM, WRITE and EXIT
SD-35	Power on while holding PAUSE, PROG and REPEAT
SDE-330	Power on
SDX-330	Power on
SE-50	Power on while holding NUMBER DOWN (v), VALUE DOWN (v) and UTILITY. Press WRITE
SE-70	Power on while holding EXIT and UTILITY. Press UTILITY, then PARAMETER LEFT (<). Press PARAMETER RIGHT (>), then CONTROL 1
SN-700	Power on while holding CH-A of NOISE CANCEL and CH-A of HUM CANCEL
Sonic Cell	Power on while holding SMF/AUDIO PLAYER, EFFECTS, and EXIT
SP-700	Power on
SP-303	Power on while holding FILTER+DRIVE, PITCH and DELAY
SP-404	Power on while holding MARK
SP-505	Power on while holding EXIT and ENTER
SP-555	Power on while holding MARK
SP-606	With the power on, press MENU. Press ENTER. Press and hold FUNCTION and F1. When the System Info menu shows in the display, release FUNCTION and F1, and then press F2
SP-808	Version is displayed on power-up
SPD-S	Power on while holding ALL SOUND OFF and CARD
SPD-11/20	Power on while holding SELECT and EDIT
SRC-2	Power on while holding PEAK HOLD RESET. (To read version number, DIGITAL STEREO IN A LED's represent first digit, DIGITAL STEREO B LED's represent second digit and DIGITAL MIX OUT LED's represent third digit)
SRV-330	Power on
SRV-3030	Power on while holding CATEGORY, UNIT A/B and SYSTEM
SX-700	Power on while holding MOD and RSS

## T

Model	Procedure
TD-5	Power on while holding PATCH LEFT (<) and INSTRUMENT RIGHT (>)
TD-6/6V	Power on while holding KIT, the LEFT ARROW button and ENTER simultaneously
TD-7	Power on while holding SYSTEM and EDIT
TD-8	Power on while holding F1, F2 and F3, then press CLICK, followed by RIM
TD-9	With the power on, press SETUP. Hold SHIFT and press EXIT. Release SHIFT and EXIT, and press CURSOR Left and then CURSOR down.
TD-10	Power on while holding the DOWN CURSOR button. The version is displayed in the center of the screen
TD-12	Power on while holding the MIXER, AMBIENCE, and KIT buttons. When the display shows the DRUM KIT menu, release the buttons, and then press SETUP, then F3, followed by F5. The version number will show next to the word "FLASH" in the display
TD-20/SX	With the TD-20's power on, press TOOLS and then press F2[INFO]
TMC-6	Set the TRIG/HH CTRL switch on the rear panel to TRIG 6. Set the PARAMETER knob to XTALK CANCEL. Power on the unit while holding the INC and DEC buttons simultaneously

## U

Model	Procedure
-------	-----------



U-20	In the PLAY MODE section, press PART and RHYTHM simultaneously, to enter ROM PLAY. While holding MARK and JUMP, press ENTER
U-110	Power on while holding DEC and INC
U-220	Press DATA. Use the LEFT (<) and RIGHT (>) cursor buttons to select UTIL. Press ENTER. Use the LEFT (<) and RIGHT (>) cursor buttons to select ROM PLAY. Press ENTER. While holding MARK and JUMP, press ENTER

## V

Model	Procedure
V-Synth	Power on while holding -OCT, +OCT, and the 8 button
V-SynthGT	Press the SYSTEM button, then touch INFO on the touchscreen.
V-SynthXT	Power on while holding PREVIEW and BANK
VariOS	Without a PC card inserted, turn on the power. When "Part1 NO WAVE DATA" is displayed, hold EXIT and press VALUE
VA-5/7	Power on while holding PIANO, ONE TOUCH and INTRO. Then press the BANK 1 button
V-Bass	Power on while holding CURSOR down and COSM AMP
VB-99	Power on while holding < PAGE and NAME/KEY/BPM
VF-1	Power on while holding ENTER
VGA-7	Power on while holding CHORUS and REVERB
VG-8	Power on while holding PLAY and SYSTEM
VG-8B	Power on while holding the DOWN CURSOR button and the COSM BASS button
VG-88	Power on while holding the DOWN CURSOR button and the COSM GUITAR button
VG-99	Power on while holding <PAGE and NAME/KEY/BPM
VK-7	Power on while holding PERCUSSION SECOND, PERCUSSION THIRD and USER PRESETS. Press ORGAN PRESETS 3
VK-77	Power on while holding VIBRATO AND CHORUS UPPER, VIBRATO AND CHORUS LOWER and EXT, UPPER. Power off to exit
VK-88	Power on while holding BANK, WRITE and H-BAR MANUAL, then release. Then, press BANK, WRITE, and H-BAR MANUAL again
VK-1000	While holding INC and DEC, press the NUMBER 1 button, then 2, then 3, then 4, then 5, then 6, then 3
VP-70	Power on while holding PLAY, "VOICE >> MIDI" and SYSTEM
VP-9000	With power on, hold SHIFT and press EXIT
VM-3100/Pro	Power on while holding the SELECT of both channels 4 and 7 until the Check Menu is displayed, then press F4. Press F4 to return to the Check Menu screen, then power off to exit Test Mode
VS-840/EX/GX	Power on while holding down MONITOR SEL and SOLO
VS-880/EX/890	Power on while holding down CHANNEL EDIT 1 and STATUS 1
VS-1680/1880	Power on while holding down TRACK SELECT / CHANNEL EDIT 1 and STATUS 1
VS-1824CD	Power on while holding down TRACK SELECT / CHANNEL EDIT 1 and STATUS 1
VS-2000CD	Power on while holding TRACK STATUS 1 and HARMONY
VS-2400/2480	Power on while holding CH EDIT 1 and TRACK STATUS 1
VT-1	Power on while holding down the PRESET/USER button

## W

Model	Procedure
W-30	Power on while holding down the F1 button
W-50	Press LEVEL and PAN simultaneously. While holding VARIATION, press VIBRATO. While holding PERFORMANCE, press the BANK 15 button

## X

Model	Procedure
XP-10	While holding USER/PRESET, press +. While holding TONE VARIATION, press SEQ CTRL. (ROM Version shows approximately ten seconds later)
XP-30	Power on while holding CONTROLLER, -OCT and EXP A
XP-50	Press SEQUENCER. Hold SHIFT and ENTER, then press EXIT
XP-60/80	Press System. While holding INFO, press 0 on the ten-key pad
XV-88	Power on while holding EXIT. Continue to hold exit and when "128 VOICES" shows in display, press UNDO/COMPARE
XV-2020	While holding down VOLUME press VALUE. Turn CATEGORY/BANK to select "UTILITY.(PIANO). When you rotate VALUE, the version is displayed. To Exit, hold VOLUME and press VALUE
XV-3080	Power on. While holding EXIT, press the LEFT ARROW button to enter the Demo Mode. While holding UP and DOWN ARROW, press VALUE. Then while holding SHIFT, press UNDO to display the current system version
XV-5050	Power on while holding EDIT and TONE 4
XV-5080	With unit on, press SYSTEM / UTILITY, then press F6