

Roland U.S. AC Adapter Guide

Model	Original Adapter	New Adapter/Substitute	Included
A-30/33/37	ACA-120	PSA-120S	
A-300/500/800PRO	PSB-120		
A-500S	PSA-120S		
AC-2/3	PSA-120	PSA-120S	
AC-33	PSB-12U		X
AD-3/8	PSA-120	PSA-120S	
AD-5	ACF-120	PSB-120	
AF-70	BRC-120		X
AR-100/200	ACI-120	PSB-120	X
ASC-10	PSA-120	PSA-120S	X
AT-350C	PSB-120		X
AW-2/3	PSA-120	PSA-120S	
AX-09	PSB-120		X
AX-1/7	ACA-120	PSA-120S	
AX-Synth	PSB-120		X

Model	Original Adapter	New Adapter/Substitute	Included
BA-55	PSB-12U		X
BA-330	PSB-13U		X
BC-2	PSA-120S		
BCB-60	PSC-100		X
BD-2	PSA-120	PSA-120S	
BE-5/5B	PSA-120	PSA-120S	X
BF-1/3	PSA-120	PSA-120S	
BF-2/2B	ACA-120	PSA-120S	
BL-1	PSA-120	PSA-120S	
BK-3	PSB-120		X
BK-5	PSB-7U		X
BK-7M	PSB-120		X
BK-9	PSB-120		X
BR-8	PSB-120		X
BR-80	PSA-120S		
BR-532/864/600	PSA-120	PSA-120S	
BR-800	PSA-120S		X
BR-900CD	PSC-100	PSB-120	X
BR-1180/CD	PSB-7U		X
BR-1200CD / 1600CD	PSB-7U		X
BX-4/400	PSA-120	PSA-120S	
BX-8/16	ACE-120		X

Model	Original Adapter	New Adapter/Substitute	Included
C-200	PSB-7U		X
CA-30	ACA-120	PSA-120S	X
CD-2	PSB-7U		X
CD-2E / 2i	PSB-120		X
CDX-1	PSB-2U		X
CE-1/5/20	PSA-120	PSA-120S	
CE-2/2B/3	ACA-120	PSA-120S	
CEB-3	ACA-120	PSA-120S	
CF-10	ACI-120	PSB-120	X
CH-1	PSA-120	PSA-120S	

Roland U.S. AC Adapter Guide

CL-50	BRA-120	BRB-120	X
CM-300/500	ACK-120	PSB-120	X
CM-32L/P/64	ACB-120	PSB-120	X
CN-20	ACA-120	PSA-120S	X
CP-40	PSA-120	PSA-120S	X
CR-1000	PSA-120	PSA-120S	X
CR-80	ACI-120	PSB-120	X
CS-10	ACB-120	PSB-120	X
CS-1/2/3	ACA-120	PSA-120S	
CT-6	PSA-120	PSA-120S	
Cube Lite	PSD-120		X
Cube Street	PSB-120		
Cube Street EX	PSB-12U		X

Model	Original Adapter	New Adapter/Substitute	Included
D-2	ACI-120	PSB-120	X
D-5	ACI-120	PSB-120	X
DB-5/33	PSA-120S		
DB-66/88/90	PSA-120S		
DC-2/3	PSA-120S		
DD-2/3/5/6/7	PSA-120S		
DD-20	PSA-120S		
DF-2	PSA-120S		
DI-1	PSA-120S		
DIF-800	ACI-120	PSB-120	X
DM-2/3	PSA-120S		
DN-2	PSA-120S		
DP-90E/SE	PSB-7U		X
DR-110	PSA-120S		
DR-202/A/E	PSA-120S		
DR-3/5	PSA-120S		
DR-550/mkII	PSA-120S		
DR-660	BRA-120	BRB-120	X
DR-670	PSA-120S		
DR-770/880	BRC-120		X
DS-1/2/3	PSA-120S		
DS-330	BRA-120	BRB-120	X
DSD-2/3	PSA-120S		
Duo-Capture EX	PSB-120		

Model	Original Adapter	New Adapter/Substitute	Included
E-09	PSB-120		X
E-5	ACJ-120	PSB-4UREPL	X
E-12/14	ACN-120	PSB-4UREPL	X
E-15	ACI-120	PSB-120	X
E-16	ACN-120	PSB-4UREPL	X
E-28	ACO-120	PSB-4UREPL	X
E-35	ACJ-120	PSB-4UREPL	X
E-36	ACI-120	PSB-120	X
E-38	ACO-120	PSB-4UREPL	X
E-50/60	PSB-4U	PSB-4UREPL	X
E-56/66/68	ACJ-120	PSB-4UREPL	X

Roland U.S. AC Adapter Guide

E-300	ACJ-120	PSB-4UREPL	X
E-A7	PSB-7U		X
EC-10	PSB-120		X
EG-101	ACJ-120	PSB-4UREPL	X
EH-2	PSA-120	PSA-120S	
EH-50	BRA-120	BRB-120	X
EM-10/15	ACN-120	PSB-4UREPL	X
EM-20/25	ACO-120	PSB-4UREPL	X
EM-30/50/55	ACJ-120	PSB-4UREPL	X
EM-303/505	ACK-120	PSB-120	X
ep-3/5	ACI-120	PSB-120	X
ep-7	ACL-120	PSB-4UREPL	X
ep-7mkII	ACK-120	PSB-120	X
ep-9	ACK-120	PSB-120	X
ep-70	ACB-120	PSB-120	X
ep-75/95	ACO-120	PSB-4UREPL	X
ep-85	ACJ-120	PSB-4UREPL	X
ep-90	ACB-120	PSB-120	X
ep-97	ACJ-120	PSB-4UREPL	X
ep-707	ACK-120	PSB-120	X
ep-760	ACO-120	PSB-4UREPL	X
ES-8	PSA-120S		
EQ-20	PSA-120	PSA-120S	
EXR-3	ACO-120	PSB-4UREPL	X
EXR-5/7/7S	PSB-4U	PSB-4UREPL	X
EXR-40/46OR	PSB-4U	PSB-4UREPL	X

Model	Original Adapter	New Adapter/Substitute	Included
Fantom-Xa	PSB-120		X
F-20 / 30 / 50	PSB-120		X
F-90/100	PSB-120		X
F-110/120	PSB-7U		X
F-130R / 140R	PSB-7U		X
FA-06 / FA-08	PSB-120		X
FA-66/101	PSB-120		X
FB-2	PSA-120S		
FBM-1	PSA-120	PSA-120S	
FC-200/300	PSA-120	PSA-120S	
FC-50	PSA-120	PSA-120S	
FDR-1	PSA-120	PSA-120S	
FP-2/3/4	PSB-120		X
FP-4F	PSB-7U		X
FP-5	PSB-3U	PSB-7U	X
FP-7/7F	PSB-7U		X
FP-30	PSB-7U		X
FP-50/80	PSB-7U		X
FR-1/2/2B	PSB-120		X
FR-1X/XB	PSB-120		X
FR-3/S/B/BS	PSB-4U	PSB-4UREPL	X
FR-3X/XB	PSB-7U		X
FR-18D	PSB-120		X
FRV-1	PSA-120S		

Roland U.S. AC Adapter Guide

FT-2	ACA-120	PSA-120S	
FW-3	PSA-120	PSA-120S	
FZ-2/3/5	PSA-120	PSA-120S	

Model	Original Adapter	New Adapter/Substitute	Included
GE-21	BRA-120	BRB-120	X
GE-6	PSA-120	PSA-120S	
GE-7/7B	ACA-120	PSA-120S	
GE-10	PSA-120	PSA-120S	
GEB-7	PSA-120	PSA-120S	
GFC-50	PSA-120	PSA-120S	X
GI-10	ACM-120	PSA-120S	X
GI-20	ACI-120	PSB-120	X
GP-20	PSA-120	PSA-120S	
GR-09	BRA-120	BRB-120	X
GR-D/S	PSA-120S		
GR-1	ACI-120	PSB-120	X
GR-20/33	BRC-120		X
GR-30	ACI-120	PSB-120	X
GR-55	PSB-120		X
GS-10	BRC-120		X
GT-001	PSA-120S		X
GT-3	BRC-120		X
GT-6/6B/8	BRC-120		X
GT-10/10B	PSB-120		X
GT-100	PSB-120		X
GW-7/8	PSB-120		X
GX-700	BRC-120		X

Model	Original Adapter	New Adapter/Substitute	Included
HA-5	PSA-120	PSA-120S	
HC-2	PSA-120	PSA-120S	
HD-1/3	PSB-120		X
HF-2	ACA-120	PSA-120S	
HM-2	ACA-120	PSA-120S	
HM-3	PSA-120	PSA-120S	
HP-503	PSB-7U		X
HP-505	PSB-14U		X
HPI-50e	PSB-14U		X
HP-603 / 605	PSB-14U		X
HPD-10	PSB-120		X
HPD-15	ACI-120	PSB-120	X
HPD-20	PSB-120		X
HR-2	PSA-120	PSA-120S	
HS-5	PSB-120		X

Model	Original Adapter	New Adapter/Substitute	Included
JD-Xi	PSD-120		X
JD-XA	PSB-7U		X
JM-5	PSB-120		X
JM-8	PSB-7U		X
Juno-D	ACI-120	PSB-120	X

Roland U.S. AC Adapter Guide

Juno-Di	PSB-120		X
Juno-DS88/DS61	PSB-120		X
Juno-G / Gi	PSB-120		X
Juno-Stage	PSB-120		X
Jupiter-50	PSB-120		X
JV-30/35	ACI-120	PSB-120	X
JV-50	ACK-120	PSB-120	X
JV-1010	ACI-120	PSB-120	X
JW-50	ACK-120	PSB-120	X
JS-5	BRC-120		X
JS-8/10	PSB-120		X
JX-1	BRA-120	BRB-120	X
JX-305	ACI-120	PSB-120	X

Model	Original Adapter	New Adapter/Substitute	Included
KC-110	PSB-12U		X
KF-7	PSB-3U	PSB-7U	X

Model	Original Adapter	New Adapter/Substitute	Included
LM-2	ACA-120	PSA-120S	
LM-2B	PSA-120	PSA-120S	
LMB-3	PSA-120	PSA-120S	
LS-2	PSA-120	PSA-120S	
LVC-1N	ACN-120	PSB-4UREPL	X
LX-7 / 17	PSB-14U		X

Model	Original Adapter	New Adapter/Substitute	Included
M-10DX/MX	PSB-120		X
M-16DX	PSB-120		X
M-100FX	ACI-120	PSB-120	X
M-660	ACI-120	PSB-120	X
MC-09	ACI-120	PSB-120	X
MC-50/mkII	ACI-120	PSB-120	X
MC-202	PSA-120	PSA-120S	X
MC-303 / 307	ACI-120	PSB-120	X
MC-808	PSB-3U	PSB-7U	X
MD-2	PSA-120	PSA-120S	
ME-6/6B	BRA-120	BRB-120	X
ME-8/8B	BRC-120		X
ME-20/20B	PSA-120	PSA-120S	
ME-25	PSA-120S		
ME-30/33	PSA-120	PSA-120S	
ME-50/50B	PSA-120	PSA-120S	
ME-70	PSA-120S		
ME-X	ACI-120	PSB-120	X
Micro-BR	PSA-120	PSA-120S	
Micro Cube	ACR-120		X
Micro Cube GX	PSD-120		X
Micro Cube RX	PSB-120		X
Micro Cube Bass RX	PSB-120		X
Mobile Cube	PSB-120		
ML-2	PSA-120	PSA-120S	

Roland U.S. AC Adapter Guide

MPD-4	PSA-120	PSA-120S	X
MS-1	PSA-120	PSA-120S	
MSL-15	PSA-120	PSA-120S	
MT-100/120	ACB-120	PSB-120	X
MT-2	PSA-120	PSA-120S	
MT-200	ACK-120	PSB-120	X
MT-32	ACB-120	PSA-120S	X
MT-90S	PSB-120		X
MV-30	ACK-120	PSB-120	X
MX-1	PSD-120		X
MX-10	BRA-120	BRB-120	X
MX-5	PSA-120	PSA-120S	
MZ-2	PSA-120	PSA-120S	

Model	Original Adapter	New Adapter/Substitute	Included
NF-1	ACA-120	PSA-120S	
NS-2	PSA-120	PSA-120S	
NS-50	BRA-120	BRB-120	X

Model	Original Adapter	New Adapter/Substitute	Included
OC-2	ACA-120	PSA-120S	
OC-3	PSA-120	PSA-120S	
OC-20G	PSA-120	PSA-120S	
Octa-Capture	PSB-120		X
OD-1/2	ACA-120	PSA-120S	
OD-2R/3	PSA-120	PSA-120S	
OD-20	PSA-120	PSA-120S	
ODB-3	PSA-120	PSA-120S	
OS-2	PSA-120	PSA-120S	

Model	Original Adapter	New Adapter/Substitute	Included
P-55	ACI-120	PSB-120	X
PAD-8/80	ACF-120	PSB-120	X
PC-2	PSA-120	PSA-120S	
PC-200/mkII	ACA-120	PSA-120S	
PC-50	PSA-120	PSA-120S	
PC-80	PSB-120		X
PC-300	PSA-120	PSA-120S	
PCR-A30	ACI-120	PSB-120	X
PCR-M1	PSA-120	PSA-120S	
PCR-30/50/80	ACP-120	PSA-120S	X
PCR-M30/50/80	ACP-120	PSA-120S	X
PCR-300/500	PSB-120	PSB-120	
PCR-800	PSB-120	PSB-120	
PD-1	ACA-120	PSA-120S	
PH-1/1R/2/3	ACA-120	PSA-120S	
PK-5/5A	ACA-120	PSA-120S	
PK-6	PSB-120		
PK-7	ACF-120	PSB-120	
PK-9	PSB-120		X
PK-25	ACI-120	PSB-120	X
PM-16	ACF-120	PSB-120	X

Roland U.S. AC Adapter Guide

PMA-5	PSA-120	PSA-120S	
PN-2	PSA-120	PSA-120S	
PQ-3B	PSA-120	PSA-120S	
PQ-4	PSA-120	PSA-120S	
PQ-50	BRA-120	BRB-120	X
Prelude	PSB-7U		X
PR-1	PSA-120	PSA-120S	
PR-100	ACB-120	PSB-120	X
PR-300	ACK-120	PSB-120	X
PS-2/3/5	PSA-120	PSA-120S	
PS-6	PSA-120S		
PSM-5	PSA-120	PSA-120S	X
PW-2	PSA-120	PSA-120S	
PW-10	PSA-120	PSA-120S	

Model	Original Adapter	New Adapter/Substitute	Included
R-05	PSB-6U	UDC-25	
R-09/09HR	PSB-6U		X
R-1	PSB-6U		X
R-5/8/8mkII	ACH-120		X
R-26	PSB-120		X
R-70	ACI-120	PSB-120	X
RA-30/50	ACI-120	PSB-120	X
RA-90/95	ACI-120	PSB-120	X
RBF-10	PSA-120	PSA-120S	X
RC-2/3	PSA-120	PSA-120S	
RC-20/XL	PSA-120	PSA-120S	
RC-30	PSA-120S		
RC-50	ACI-120	PSB-120	X
RC-300	PSA-120S		X
RC-505	PSA-120S		X
RCE-10	PSA-120	PSA-120S	X
RD-64	PSB-120		X
RD-300SX/GX/NX	PSB-120		X
RDD-20	PSA-120	PSA-120S	X
RE-20	PSA-120S		
RM-2	PSA-120	PSA-120S	
RMP-1/3/5	PSA-120	PSA-120S	
ROD-10	PSA-120	PSA-120S	X
RP-201/301	PSB-7U		X
RP-400/401R	PSB-7U		X
RPD-10	PSA-120	PSA-120S	X
RPH-10	PSA-120	PSA-120S	X
RPQ-10	PSA-120	PSA-120S	X
RPW-7	PSA-120	PSA-120S	X
RRV-10	PSA-120	PSA-120S	X
RS-5/9	ACI-120	PSB-120	X
RS-50	ACI-120	PSB-120	X
RS-70	PSB-120		X
RT-20	PSA-120	PSA-120S	
RV-2/3/5	PSA-120	PSA-120S	

Roland U.S. AC Adapter Guide

Model	Original Adapter	New Adapter/Substitute	Included
SB-55	ACI-120	PSB-120	X
SBX-1	PSA-120		X
SC-155	ACI-120	PSB-120	X
SC-33	BRA-120	BRB-120	X
SC-50	ACI-120	PSB-120	X
SC-55/55mkII	ACI-120	PSB-120	X
SC-7	ACM-120	PSA-120S	X
SD-1	ACA-120	PSA-120S	
SD-2	PSA-120	PSA-120S	
SD-20	ACP-120	PSA-120S	X
SD-35	ACI-120	PSB-120	X
SD-50	PSB-120		X
SE-50/70	BRB-120	BRC-120 (ok per service)	X
SG-1	PSA-120	PSA-120S	
SH-01	PSB-120		X
SH-32	ACI-120	PSB-120	X
SH-101	PSA-120	PSA-120S	
SH-201	PSB-120		X
SI-80S	PSA-120	PSA-120S	X
SK-500	ACI-120	PSB-120	X
SL-20	PSA-120	PSA-120S	X
Sonic Cell	PSB-120		X
SP-1	PSA-120	PSA-120S	
SP-202	PSA-120	PSA-120S	
SP-303	ACI-120	PSB-120	X
SP-404/SX	PSB-120		X
SP-505	BRC-120		X
SP-555/606	PSB-120		X
SPD-6	PSA-120	PSA-120S	
SPD-8	ACF-120	PSB-120	X
SPD-11/20	BRA-120	BRB-120	X
SPD-30	PSB-120		X
SPD-S	ACI-120	PSB-120	X
SPD-SX	PSB-120		X
ST-2	PSA-120S		
Studio Capture	PSB-120		X
Super UA	PSB-1U		X
SX-700	BRC-120		X
SY-300	PSA-120S		X
SYB-3	PSA-120	PSA-120S	
System-1/1M	PSD-120		X

Model	Original Adapter	New Adapter/Substitute	Included
TB-303	ACA-120	PSA-120S	
TB-3	PSD-120		X
TD-1	PSB-1U		
TD-1K	PSB-1U		
TD-3	ACI-120	PSB-120	X
TD-4	PSB-120		X
TD-5	BRA-120	BRB-120	X
TD-6/6V	ACI-120	PSB-120	X

Roland U.S. AC Adapter Guide

TD-7	BRB-120		X
TD-8	ACI-120	PSB-120	X
TD-9	PSB-120		X
TD-11/15	PSB-120		X
TD-25	PSB-120		X
TL-8	BRB-120		X
TL-16	ACD-120		X
TM-2	PSD-120		X
TM-3/7	PSA-120	PSA-120S	
TMC-6	ACI-120	PSB-120	X
TR-2	PSA-120	PSA-120S	
TR-505	PSA-120	PSA-120S	
TR-606	ACA-120	PSA-120S	
TR-626	PSA-120	PSA-120S	
TR-707/727	ACO-120	PSB-4UREPL	X
TR-8	PSD-120		X
TU-2/3/6/8	PSA-120	PSA-120S	
TU-12BW/H/EX	PSA-120	PSA-120S	
TU-15	PSA-120	PSA-120S	
TU-50	BRA-120	BRB-120	X
TU-70	PSA-120	PSA-120S	
TU-88K/WH	PSA-120S		
TU-120/121	PSA-120	PSA-120S	
TU-1000	PSB-120		X
TW-1	ACA-120	PSA-120S	

Model	Original Adapter	New Adapter/Substitute	Included
UA-5	ACI-120	PSB-120	X
UA-100	ACI-120	PSB-120	X
UA-101	PSB-120		X
UA-700	ACI-120	PSB-120	X
UA-1010/1610	PSB-120		X
UA-S10	PSB-120		X
UM-550	ACI-120	PSB-120	X

Model	Original Adapter	New Adapter/Substitute	Included
VB-2	ACA-120	PSA-120S	
VB-99	PSB-120		X
VE-1	PSA-120		
VE-5/20	PSA-120S		X
VE-7000	PSB-120		X
VF-1	BRC-120		X
VG-99	PSB-120		X
VK-8M	PSB-120		X
VP-7	PSB-120		X
VR-09	PSB-120		X
VS-100	PSB-120		
VS-2000CD	PSB-120	PSB-7U	X
VT-1	ACI-120	PSB-120	X
VT-12	PSB-6U	UDC-25	
VT-3	PSD-120		X

Roland U.S. AC Adapter Guide

Model	Original Adapter	New Adapter/Substitute	Included
W-50	ACK-120	PSB-120	
WP-20G	PSA-120	PSA-120S	
WS-20/20M	ACO-120	PSB-4UREPL	X

Model	Original Adapter	New Adapter/Substitute	Included
XP-10	ACI-120	PSB-120	X
XT-2	PSA-120	PSA-120S	
XV-2020	ACI-120	PSB-120	X

Substitute Information

Model	New / Substitute
ACA-120	PSA-120S
ACB-120	PSB-120
ACF-120	PSB-120
ACG-120	PSB-7U
ACI-120	PSB-120
ACJ-120	PSB-4UREPL
ACK-120	PSB-120
ACL-120	PSB-4UREPL
ACM-120	PSA-120S
ACN-120	PSB-4UREPL
ACO-120	PSB-4UREPL
ACP-120	PSA-120S
ACR-120	PSA-120S
ASA-120	PSB-7U
PSA-120	PSA-120S

Technical Information

	Model	Voltage	Amps	
Unregulated DC	ACA-120	9v	200mA	
	ACB-120	9v	1200mA	
	ACD-120	±15v	350/350mA	
	ACE-120	±21.5v	300/300mA	
	ACF-120	9v	500mA	
	ACG-120	12v	200mA	
	ACH-120	±10v	500/150mA	
	ACI-120	9v	1000mA	
	ACJ-120	12v	1750mA	
	ACK-120	9.5v	1500mA	
	ACL-120	12v	1700mA	
	ACM-120	9v	300mA	
	ACN-120	12v	500mA	
	ACO-120	12v	1000mA	
	ACP-120	9v	500mA	
	ACR-120	9v	500mA	
	ASA-120	12v	2000mA	
	Regulated DC	PSA-120	9v	200mA
		PSB-120	9v	2000mA
PSB-2U		12v	2800mA	
PSB-3U		12v	3600mA	

Roland U.S. AC Adapter Guide

AC

PSB-4U	12v	3500mA
PSB-4UREPL	12v	4800mA
PSB-6U		
PSB-7U	12v	4800mA
PSB-12U	13v	4A
PSB-13U	13v	4A
BRA-120	12v	500mA
BRB-120	12v	1500mA
BRC-120	14v	800mA